



*Manufacturers of Process
Controls and Instrumentation*

Instruction Manual

Model: *RCI-200-XXX*

Function: *Remote Control Signal Interface*

- Communication:
- XXX=SER: RS-232/485*
 - XXX=MDM Modem Dial-Up*
 - XXX=FSK: Leased Line*
 - XXX=RF9: 900 Mhz Wireless*
 - XXX=RF2: 2.4 Ghz Wireless*

Input: 2 "Dry" Contacts and 2 Analog Inputs

Output: 2 Form 'C' Contacts and 2 Analog Outputs

- Power:
- 117VAC, 50/60Hz
 - 24 VDC

Serial #: _____

(If special or required)

For Technical Assistance And Questions Call
USA: (734) 677-0459 CANADA: (905) 660-5336

Restocking Policy

All product returned to Pribusin Inc. in prime condition (not damaged, scratched or defaced in any way) within seven (7) months from the original date of shipment is subject to a 50% restocking charge. All product must be accompanied by a Return Authorization number (RA number) which must be obtained from Pribusin Inc. prior to returning any product.

After seven (7) months from the original date of shipment, products cannot be returned for restocking.

Custom designed products, modified products or all non-standard products may not be returned for restocking.

Warranty Policy

Pribusin Inc. warrants equipment of its own manufacture to be free from defects in material and workmanship, under normal conditions of use and service, and will replace any component found to be defective, on its return to Pribusin Inc., transportation charges prepaid, within one year of its original purchase. Pribusin Inc. will extend the same warranty protection on equipment, peripherals and accessories which is extended to Pribusin Inc. by the original manufacturer. Pribusin Inc. also assumes noliability, expressed or implied, beyond its obligation to prelace any component involved. Such warranty is in lieu of all other warranties, expressed or implied.



Standard Features:

Bi-directional Communication using a Phone Line
Uses MODBUS Protocol for Reliable Data Transfer
2 Dry Contacts and 2 Analog Inputs
2 'C' Relay Contacts and 2 Analog Outputs
Uses Analog Half-Duplex Leased Telephone Line
No Calibration Required
Microprocessor Controlled for High Accuracy
Power: 117 VAC 50/60 Hz (Optional 24 VDC)
Built-in Overvoltage Protection on Telephone Line
High Noise Rejection
CSA and NRTL Approved (LR51078)

Function:

The RCI-200-FSK is a bi-directional remote communication system that exchanges the status of 2 dry contact inputs and 2 analog inputs between a master and remote unit. Both the master and remote unit have inputs and outputs to allow remote monitoring and remote control.

Since the master and remote units are connected via leased telephone line, and hence are 'always-on', a change in signal at one end is transmitted to the other end with very little delay. This makes this unit ideal for real-time monitoring of remote tanks, pumps, etc.

The bi-directional operation allows for control signals to be sent back to the remote site to take action based on the incoming monitored signal.

This unit may also be used as a remote unit in a multi-remote system where the master is a multi-channel device such as the RCI-400 or RCI-800.

Connection:

Units are connected via a class 'C' line (Dial-up or leased). Regular J11 Phone Jacks make for easy installation. When connecting units on a PBX system make sure it can accept analog modem transmissions. Serial systems connect via standard modem cable.

Specifications:


Transmission Medium: Analog Phone Line, Half-Duplex
BAUD Rate: 2400 BAUD
Transmission Output: -6dB max., -8dB typ.
Operating Temperature: -20 Deg.C. to +50 Deg.C.
Relay Contacts: 10A 1/8Hp @ 125VAC
6A 1/8Hp @ 277VAC
Power: 117 VAC, 60/50 Hz
(24VDC Available)
Enclosure: NEMA4X (NEMA12 available as an option)

RCI-200-FSK

Enclosures & Dimensions:


Options: (Add letters to end of Model Number)

D - 8-Digit Scanning Display

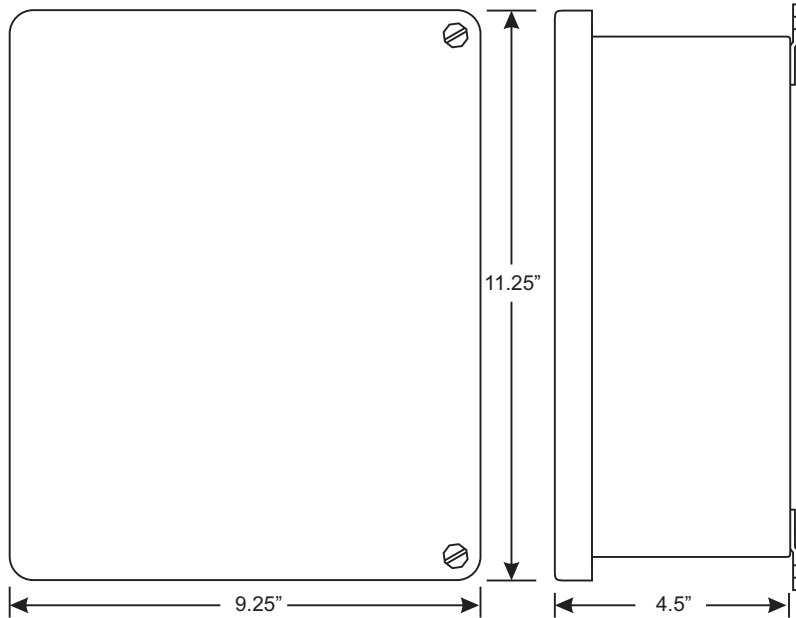

Connection:


1. Point-to-Point System: 2 RCI-200-FSK Units

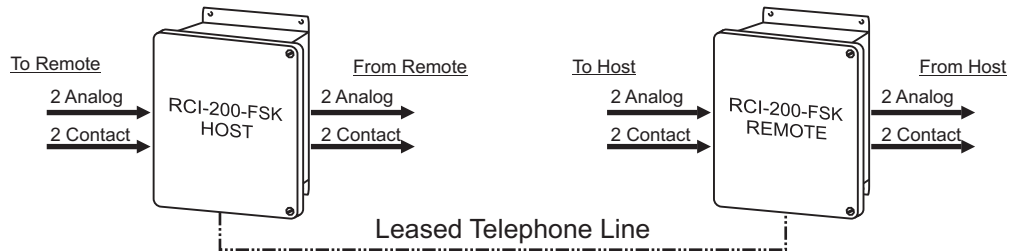

2. Host-to-Multi-Remote System:

- 1 RCI-400-FSK Host
- 2 RCI-200-FSK Remotes

This configuration provides **two** bi-directional analog and contact signal between one host unit and two remote units.

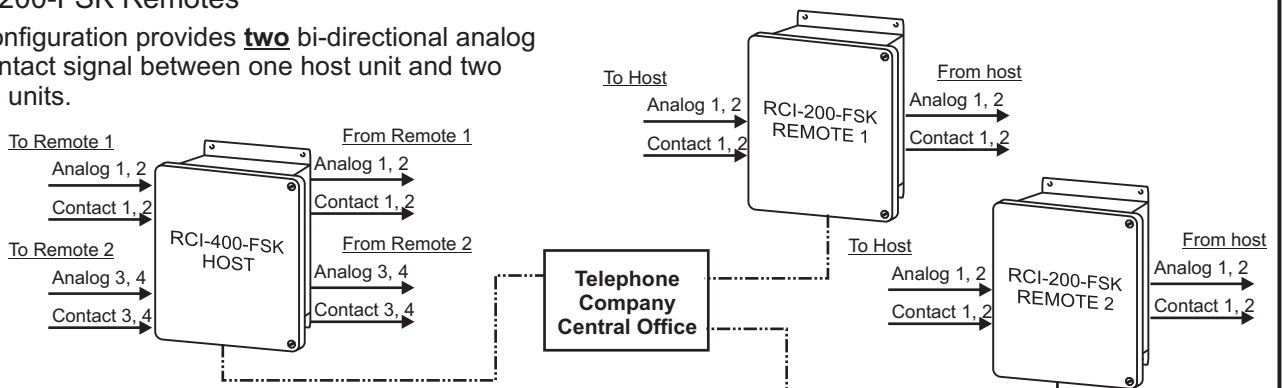

Manufactured By:

Pribusin Inc.

www.pribusin.com
info@pribusin.com


USA:

Pribusin Inc.
 743 Marquette Ave.
 Muskegon, MI 49442
 Ph: (231) 788-2900
 Fx: (231) 788-2929



CANADA:

Pribusin Inc.
 101 Freshway Dr. Unit 57
 Concord, Ontario, L4K 1R9
 Ph: (905) 660-5336
 Fx: (905) 660-4068

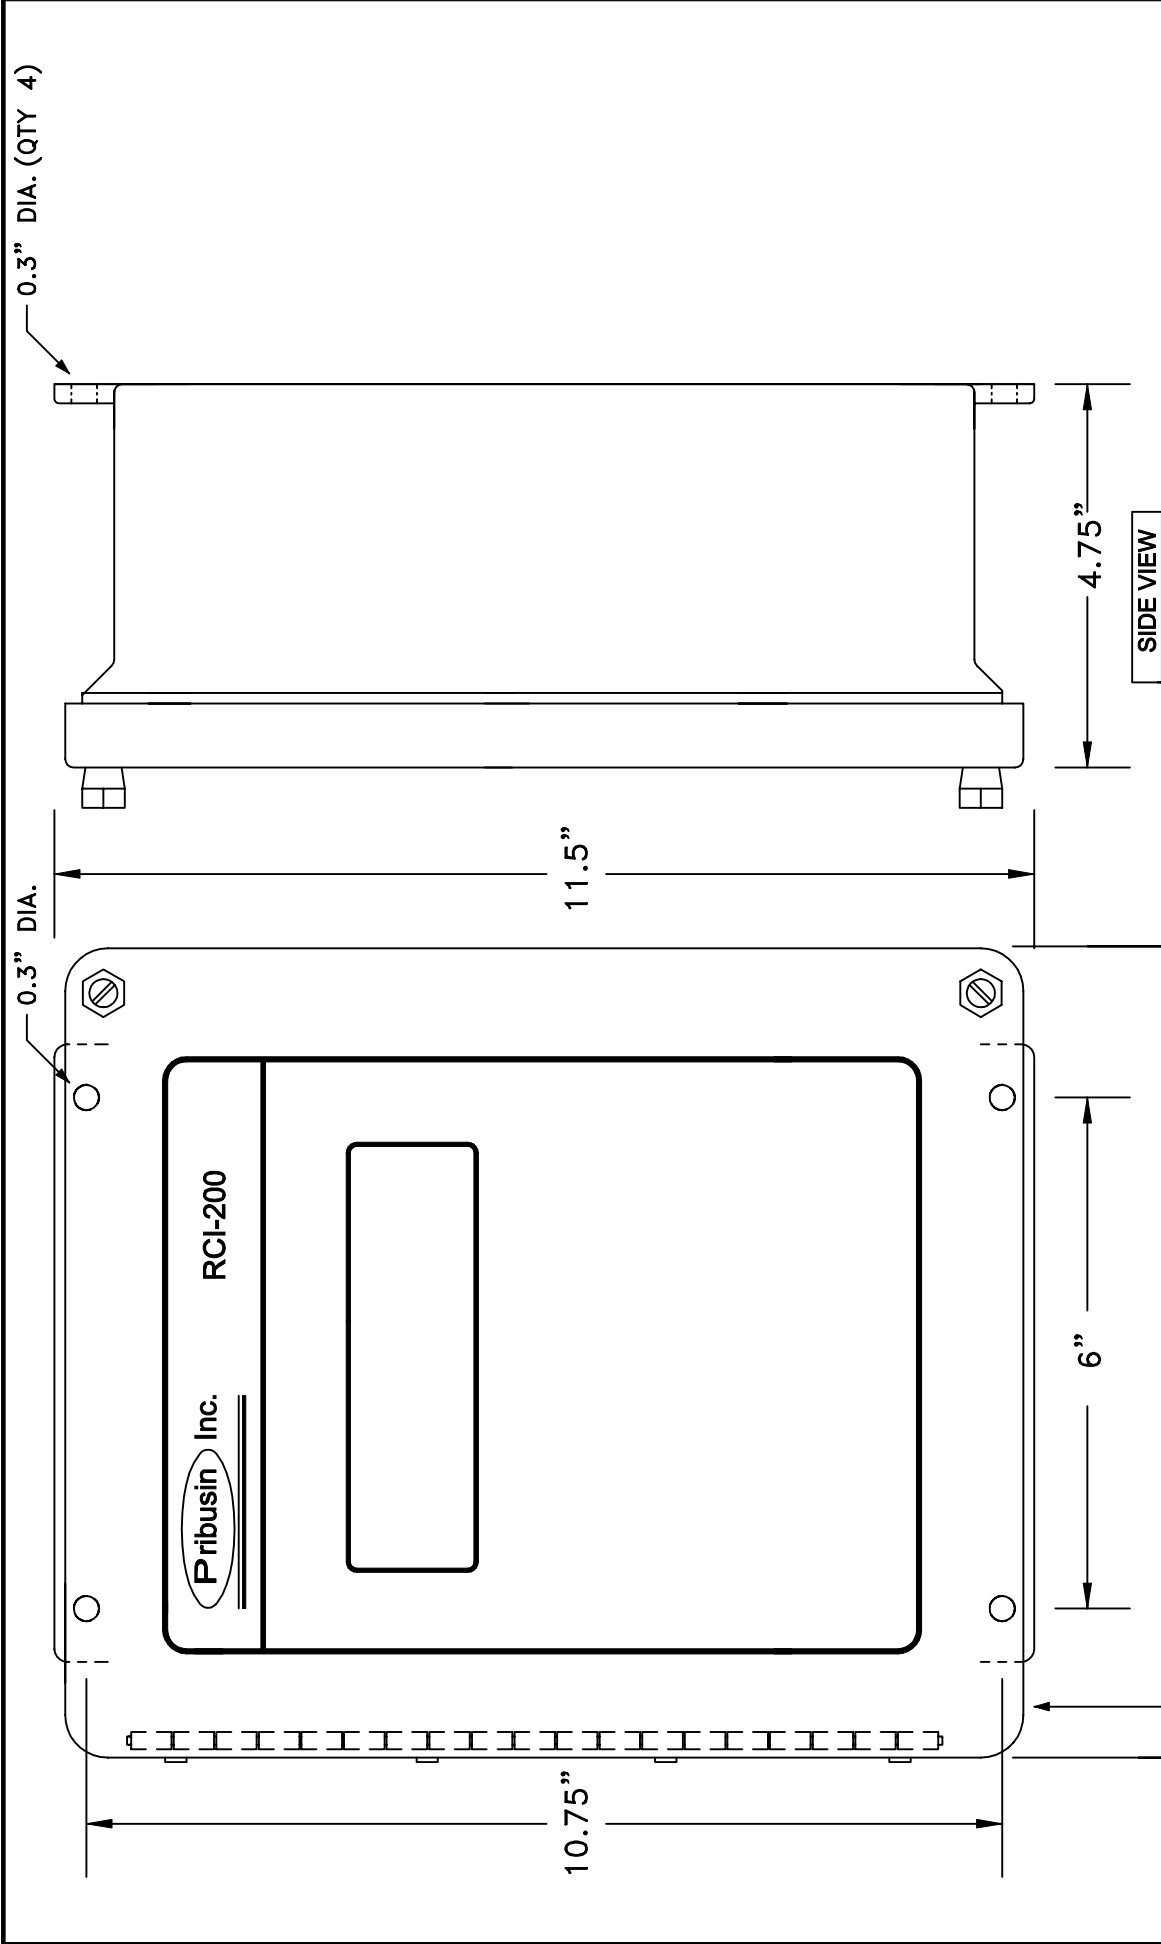


FIBERGLASS ENCLOSURE
WITH STAINLESS STEEL HINGE
AND SCREW COVER


Pribusin Inc. ©	
CHKD:	DATE: Apr. 15/99
Model: RCI-200 Remote Control Signal Interface	
Enclosure Detail	
DWG. NO.:	106121
REV. A	

Class C Telephone Line Transmission (Several Miles)

RCI-200-FSK Master Unit

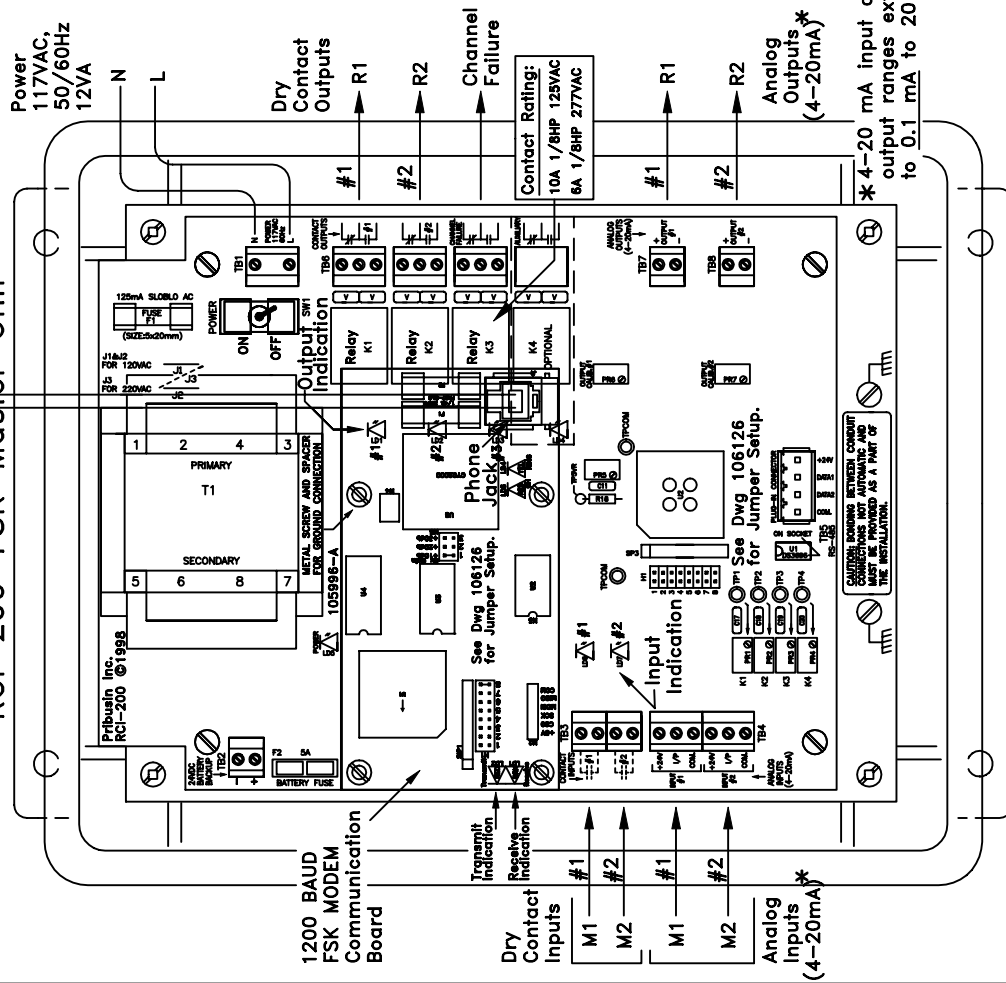

RCI-200-FSK Remote Unit

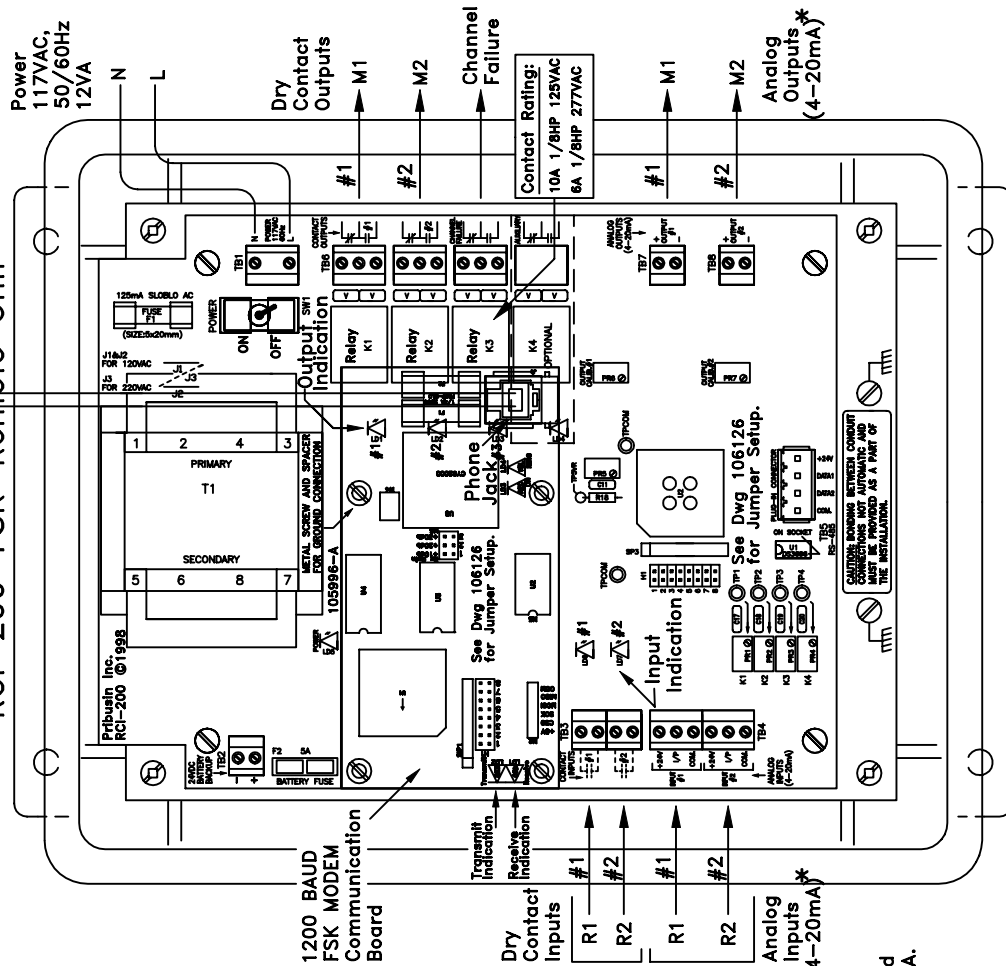

Note:

1. For Functional Description of this Communication System See Dwg 106123.
2. For Close View of RCI-200-FSK Unit See Dwg 106125.
3. For Details on Class C Telephone Line Transmission See Dwg 105815.
4. For Enclosure Details See Dwg 106121 & 106122.

Pribusin Inc. ©

CHKD: DATE: Apr. 15/99 DRN: KS

Model: RCI-200-FSK
Remote Control Signal Interface
Typical Connection Diagram

DWG. NO.: 106124


REV. A

Class C Telephone Line Transmission (Several Miles) →

RCI-200-FSK Master Unit

To Remote Unit

Power
117VAC,
50/60Hz
12VA

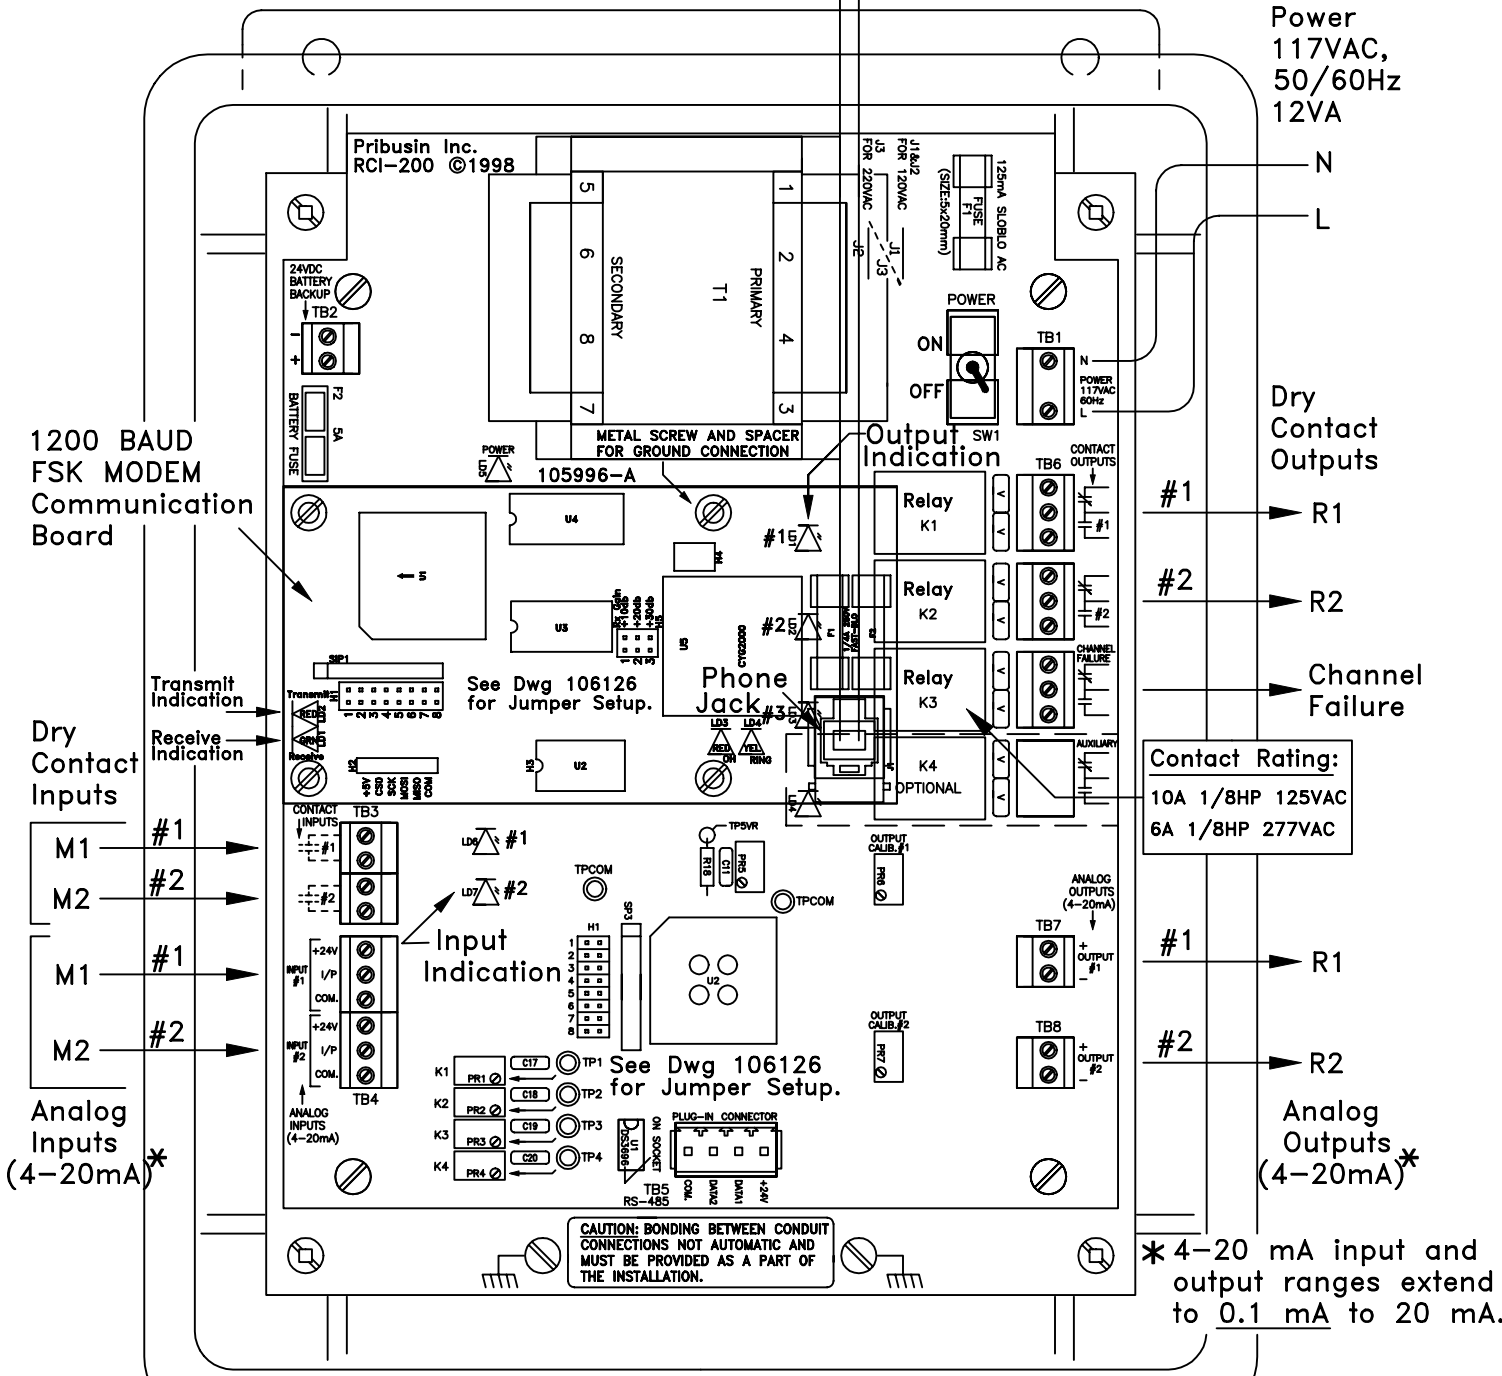

Contact Rating:
10A 1/8HP 125VAC
6A 1/8HP 277VAC

* 4-20 mA input and output ranges extend to 0.1 mA to 20 mA.

CAUTION: BONDING BETWEEN CONDUIT CONNECTIONS NOT AUTOMATIC AND MUST BE PROVIDED AS A PART OF THE INSTALLATION.

- Note:**
1. For Functional Description of this Communication System See Dwg 106123.
 2. For Typical Connection Diagram See Dwg 106124.
 3. For Details on Class C Telephone Line Transmission See Dwg 105815.
 4. For Enclosure Details See Dwgs 106121 & 106122.

Pribusin Inc. ©		
CHKD :	DATE : Apr. 15/99	DRN: KS
Model: RCI-200-FSK Remote Control Signal Interface Close View of RCI-200-FSK Unit		
DWG. NO. :	106125	REV. A

Class C signal and control channel transmission characteristics

Type of Service:	Signal and control circuits by voice frequency tones/voice circuit alternate use of channel
Maximum information rate:	600 bauds
Mode of operation:	2 point or multipoint Half or full duplex (2 point only full duplex)
Method of termination:	2 wire or 4 wire
Impedance—source & load:	600 ohms, balanced & resistive
Impedance of channel:	Nominal 600 ohms
Maximum signal power:	-8 dbm composite tones (0 TLP)
Maximum voice level:	-8 Vu. (0 TLP) <i>Note: 0 TLP is zero level transmission reference point, generally sending station.</i>
Loss 1000 Hz:	20 db maximum (L)
Frequency Response	
350-2750 Hz:	-3 to +6 db referred to (L)
Outside this band:	Not specified—no DC transmission
Circuit background noise:	30 db signal-to-noise ratio minimum

Pribusin Inc. ©

CHKD : DATE : Apr. 17/97 DRN: KS

**Details on Class C
Telephone Line Transmission**

DWG. NO. : 105815 REV. A


RCI-200 Connections:

The RCI-200 is the main board of an RCI-200-XXX Telemetry system. It provides the input and output signal connections as well as the power supply for the unit. A separate communications board is added to the RCI-200 to allow it to communicate with other units. This communications board may have its own configuration that is in a separate section of this manual. The following configuration applies only to the RCI-200 board and is common to all communications interfaces.

AC Power & Fuse:


The RCI-200 is typically powered from 120VAC and protected by a 500mA SLOBLO fuse. It can be wired for 240VAC operation by removing (desoldering) power jumpers J1 & J2 and installing (soldering) jumper J3.

When changing the RCI-200 to 240VAC power make sure to change the fuse to half of its value, 250mA. This is important since at 240VAC the RCI-200 requires only half the current as if it were powered from 120VAC. Proper protection is only achieved by reducing the fuse value as mentioned above.


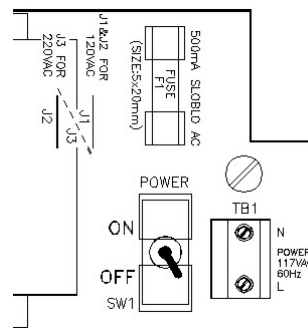


DC Power & Battery Backup:

The RCI-200 may also be powered from a 24VDC source which could be a battery or a DC power supply. The 24VDC power input is polarity protected with a fuse to prevent damage to the RCI-200 by inadvertent reverse polarity. A DC fuse provision is also provided if this power option is utilized. Insert a 5A automotive type blade fuse into the Battery Fuse socket.

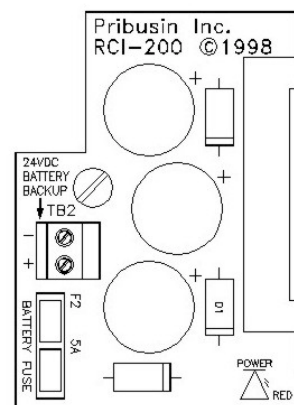


Inputs:

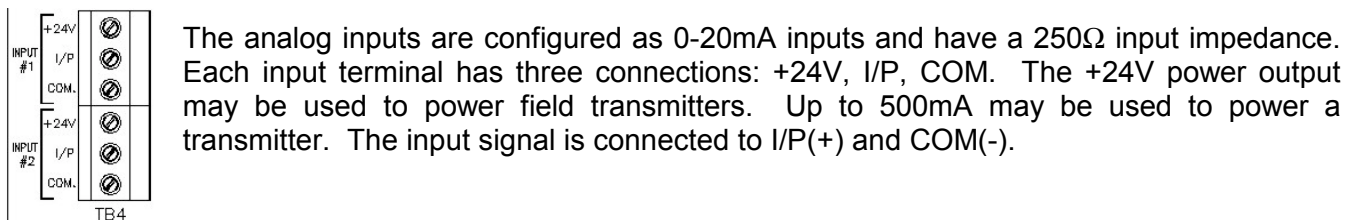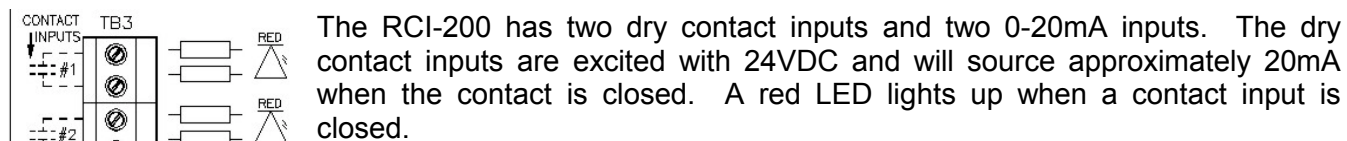


Analog inputs are connected to the RCI-200 in two fashions: 1) Normal (3-wire connection) or 2) two-wire connection. On a 3-wire connected input, an external power supply or the +24V power output terminal of the RCI provides power to the field transmitter. The field transmitter has a current source that provides the 4-20mA signal back to the RCI-200. If using the power supply of the RCI-200, the field transmitter may draw up to 125mA. A total of 1A is available to power up to 2 field transmitters.

On a 2-wire connected input, the field transmitter receives power from the RCI-200 and superimposes the signal onto the power return path. A maximum of 20mA will flow in such a connection. Make sure to consult the field transmitter manual to determine how to connect it to the RCI-200.

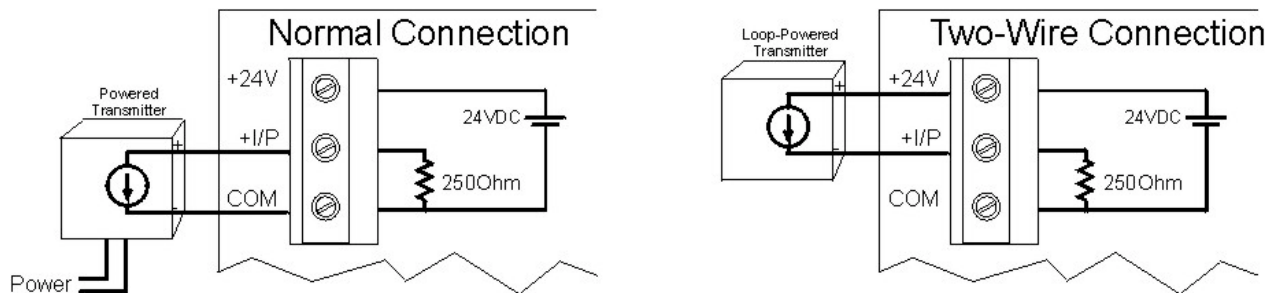

Outputs:

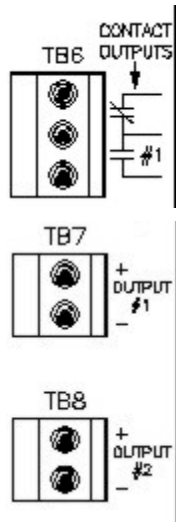


The RCI-200 has two form 'C' relay contact outputs and two 0-20mA analog outputs. The relay contacts are capable of switching 120VAC, 10A or 240VAC, 6A. An energy absorbing varistor is installed across each contact to limit switching transients. A third relay contact acts as a communications fail indicator. If no communication occurred within 30 seconds, this relay contact will energize. Upon re-established communication this relay will de-energize again.

The two analog outputs are typically configured as 0-20mA outputs and can drive into a 1000Ω load each, provided that the power supply to the unit is not below 24VDC. The outputs are not isolated from each other or from the inputs. Care must be taken when connecting the outputs to different devices so that no inadvertent ground loops are established.

Output Calibration & Input Testing:

The outputs on the RCI-200 are factory calibrated and should not require any adjustments. To check the calibration of the outputs and relays use jumpers H1-7 & H1-8 as shown below to set them to known states. If an output should require some adjustment, insert jumper H1-8 only and turn the OUTPUT CALIB. trim pot until the output reads 20mA.

H1-7	H1-8	Function
OUT	OUT	Normal Operation
OUT	IN	Outputs=20mA, Relays=Energized
IN	OUT	Outputs=0mA, Relays=De-energized
IN	IN	Outputs=Inputs, Relays=Contact Inputs

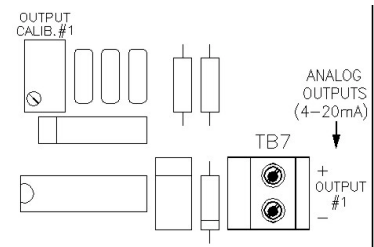

If both jumpers are IN the analog and contact inputs are passed straight through to the analog and relay outputs. This may help in troubleshooting input and output signals.

Make sure both jumpers are removed before resuming normal operation.

RCI-200 Configuration:

The RCI-200 requires no configuration other than for its communication fail operation. In the event of a communications failure on the communications board, the RCI-200 can be set up to take various actions on its outputs. This may be desirable in order to place connected devices into a safe operating mode. By default factory setting, all outputs remain at their last known state if a communications failure occurs.


H1-	Function	OUT	IN
1	Relay Fail Mode	No Change	See H1-2
2	Relay Fail Status	De-Energize	Energize
3	Output Fail Mode	No Change	Ramp to K1/K2*
4			
5			
6			
7	I/O Calibration		
8	I/O Calibration		

- * If H1-3=IN then analog output #1 will ramp to the setting of K1 and analog output #2 will ramp to the setting of K2. Both outputs will change at a rate determined by the setting of K3. The settings of the trim pots can be read on test points TP_{1,2,3} using a voltmeter. The test points read a voltage of 0-5V for a 0-100% adjustment.

$$TP_{1,2} = \frac{Output}{20} \times 5Volt$$

$$TP_3 = \frac{RampRate}{60} \times 5Volt$$


where, *Output* = 0-20 (mA) and *Ramp Rate* = 0-60 (seconds) (5 sec. minimum)

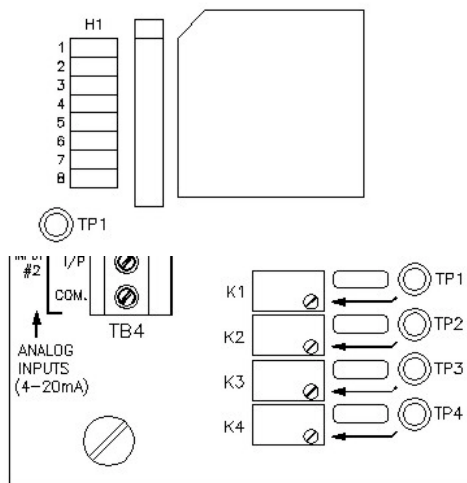


FSK Communication Option:

The -FSK communications option for the RCI series utilizes Frequency Shift Keying modems on a leased telephone line to exchange the signal data between a host and its remote(s). There are two types of **Topologies** that can be configured: 1) Point-to-Point and 2) Host-to-Multipoint.


In a **Point-to-Point** topology one host communicates with one remote. The two exchange all their signals with one another. The remote is configured as remote #1 even though it is the only remote in the system.

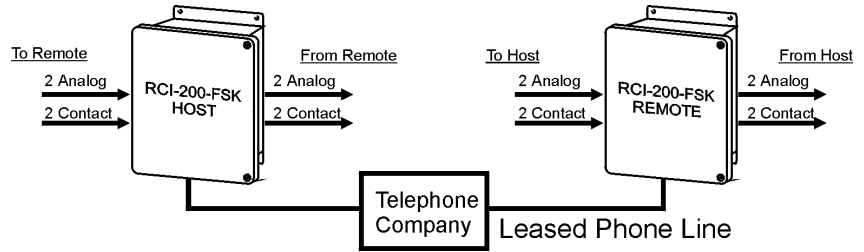

In a **Host-to-Multipoint** topology one host communicates to several remotes. Each remote is assigned an address (1,2,3, etc.) so that the host may distinguish between them. There may at most be as many remotes as there are inputs & outputs on the host.

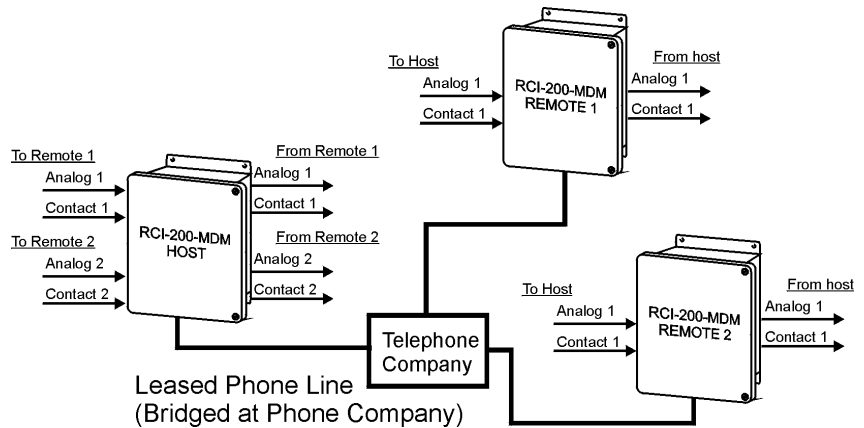

For example, an RCI-200 system, having two analog/contact inputs and outputs, may communicate with up to two remotes each having one analog/contact input and output. In this case all **#1 inputs and outputs on the host correspond to the #1 inputs and outputs on remote #1** and all **#2 inputs and outputs on the host correspond to the #1 inputs and outputs on remote #2**. The second analog/contact input and output on each of the two remotes would be unused.

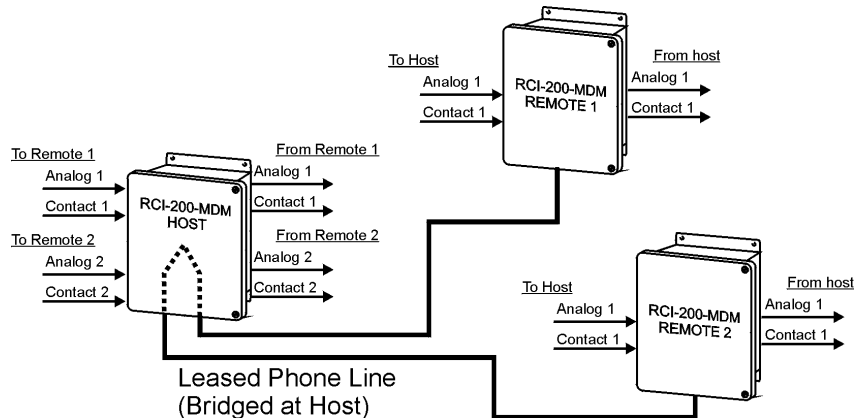


There are two ways to physically connect a Host-to-Multipoint system:

- 1) Bridging the remotes' leased lines at the phone company resulting in one leased line being connected at the host (**preferred method**). This eliminates any impedance mismatch issues that may arise by connecting two or more phone lines in parallel.
- 2) Bridging the remotes' leased lines at the host. This can cause problems in some cases because of impedance mismatches in the two lines. It also attenuates the FSK signal, which means that a higher amplification setting on the FSK board is necessary. If there excess is noise on the lines this would now also be amplified and may interfere with the signal.

FSK Modem Configuration:

All FSK modem configurations are done via two banks of DIPswitches. SW1 assigns the remote address from 1 to 200 using a binary encoding scheme. SW2 assigns the Topology, Channel Numbers and Host/Remote Mode. The switches are located on the communications board just above the main circuit board. They are a slanted rocker type that flips **up for OFF** and **down for ON**.

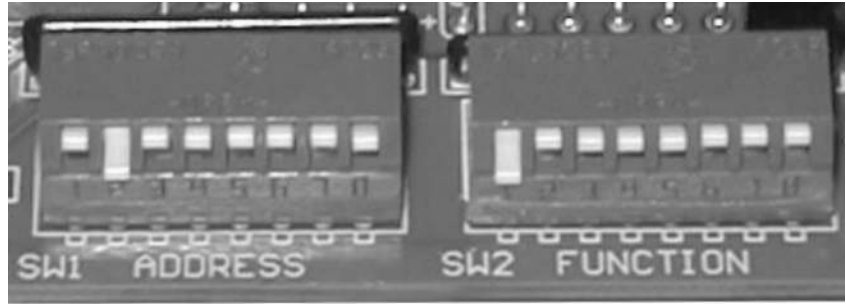

The FSK communication board has two banks of 8-position DIPswitches: SW1 and SW2. The function of these switches is slightly different for a host unit and a remote unit.

SW1-	HOST	REMOTE
1	# of Remotes	Remote Address
2	# of Remotes	Remote Address
3	# of Remotes	Remote Address
4		Remote Address
5		Remote Address
6		Remote Address
7		Remote Address
8		Remote Address

SW2-	HOST	REMOTE
1	# of Channels on each Remote	# of Channels on this Remote
2	# of Channels on each Remote	# of Channels on this Remote
3	# of Channels on Host	
4	# of Channels on Host	
5		
6		
7		
8	Host / Remote Select	Host / Remote Select

Host Configuration:

To make an RCI-200 operate as a host unit, make sure that SW2-8 is flipped down.

Next, set the **number of remotes** that the host is to communicate with using SW1-1, -2, -3. These switches are binary encoded as shown in the chart to the right.

SW1-1	SW1-2	SW1-3	# of Remotes
UP	UP	UP	1
DOWN	UP	UP	2

Next, set the **number of channels of each remote** using SW2-1, -2. One channel is considered 1 analog input/output plus 1 contact input/output. Hence an RCI-200 can have at most 2 channels.

SW2-1	SW2-2	Channels on Remotes
UP	UP	1
DOWN	UP	2

Next, set the **number of channels of the host** using SW2-3, -4. An RCI-200 can at most have 2 channels. This is the number of channels that will be exchanged between the host and each remote.

SW2-3	SW2-4	Channels on Host
UP	UP	1
DOWN	UP	2

Remote Configuration:

To make an RCI-200 operate as a REMOTE unit, make sure that SW2-8 is flipped up.

Next, set the **remote address** using SW1-1..8. This switch is binary encoded and you will have to convert the remote address to binary first. The table to the right lists the beginning, most commonly used addresses. The table extends to address 200 (using all 8 switches).


SW1-1	SW1-2	SW1-3	SW1-4	Address
UP	UP	UP	UP	1
DOWN	UP	UP	UP	2
UP	DOWN	UP	UP	3
DOWN	DOWN	UP	UP	4
UP	UP	DOWN	UP	5
DOWN	UP	DOWN	UP	6
UP	DOWN	DOWN	UP	7
DOWN	DOWN	DOWN	UP	8

Next, set the **number of channels on this remote** using SW2-1, -2. One channel is considered 1 analog input/output plus 1 contact input/output. Hence an RCI-200 can have at most 2 channels.

SW2-1	SW2-2	Channels on Remote
UP	UP	1
DOWN	UP	2


Receiver Gain Adjustment:

The FSK modem has a receive amplifier that can be used in various stages of amplification to enhance communication. If the phone line quality is poor or if the distance between units is great and presents a large signal loss, increasing the receiver gain can be used to amplify the incoming signal to restore reliable communication. Three gain settings are available: +10dB, +20dB and +30dB. These are selected via switch SW3. If all three switches are off, there is no amplification.

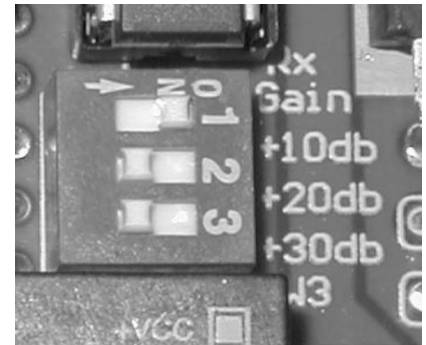

Use the lowest amplification setting that yields good results since too high of an amplification setting can distort the signal yielding unreliable communication also. To judge the state of your communication, use the red and green Transmit and Receive LEDs.

On a host unit, the red Transmit LED will light first for a fraction of a second. This is an interrogation message sent to the remote. If the remote received the message entirely and correctly, it will reply with a return message, which causes the host's green Receive LED to light for a fraction of a second. This is followed by the host then sending out the next message and so on.

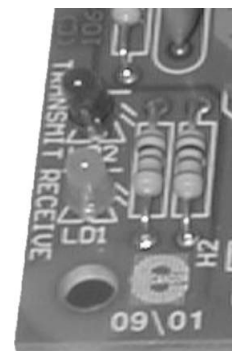

In other words, every Transmit LED flash should be followed by a Receive LED flash. If a Transmit LED flash is NOT followed by a Receive LED flash this means that one of the remotes did not receive its interrogation message properly or is currently not powered. By changing the receiver gain setting try to achieve a continuous Transmit/Receive LED flash pattern.

Occasional transmission misses are of no real concern since the units wait for 1 minute during a continuous communication loss before signaling a loss of communication. During this 1-minute delay all outputs are held at their last known value.

On a remote unit, the order of the LED flashes is reversed since the remote waits for an interrogation message from the host before it replies. The Receive LED will flash first followed by a flash of the Transmit LED.


A complete data exchange requires 4 transmissions between the host and a remote. This becomes important when considering a Host-to-Multipoint system. On the host the LED flash sequence remains unchanged. On the remote units, however, the Receive LED will flash every time any message is sent on the phone line. This includes messages not intended for a given remote. For example, if the host is currently communicating with remote #1, the Receive LED on remote #2 will flash for every interrogation and reply message that are exchanged between the host and remote #1. Only when the host begins to communicate with remote #2 does the normal Receive/Transmit flash sequence occur.

Leased Line Connection & Specifications:

The RCI-XXX-FSK uses a leased line to communicate. A leased line is a regular telephone line without the dial tone. It is essentially always ON. If you were to connect a telephone at either end and two people were to pick up the receiver they could just start talking.

The leased line must be specially installed by the telephone company and they may have various services available. The RCI-XXX-FSK does not require a special type of service (such as data, full-duplex, etc.). All that is required is a 2-wire, un-powered, voice-grade line without dial tone.

The leased line is then connected to the FSK modem using a standard RJ-11 modular connector with the center two pins being the Tip and Ring wires (typically red & green). Two fuses are provided for protection of the FSK modem. They are a 1/4A fast-blo 5x20mm type.

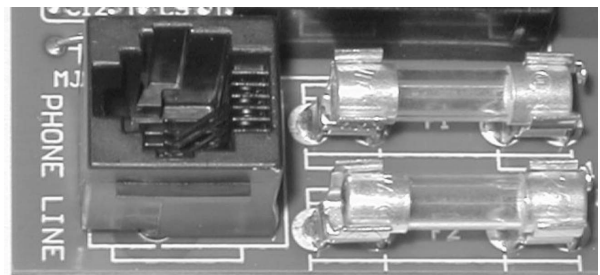

We strongly suggest installing additional surge and lightning protection at the point where the leased line enters the building. The protection on the FSK modem board is not sufficient to protect against lightning strikes or large power surges.